

*I - Inspection
*R - Replacement

| | Time interval in months: | 24 | 48 | 72 | 96 | 120 |
|----|---|---|----|----|-----|-----|
| | Km x 1.000: | 30 | 60 | 90 | 120 | 150 |
| | Miles x 1.000: | 20 | 40 | 60 | 80 | 100 |
| 1 | Coolant fluid for Power Distribution Unit: | - | - | R | - | - |
| 2 | Gearbox oil: | Replacement every 24 months / 48,000km / 30,000 Miles | | | | |
| 3 | Drive shafts and boot covers for CV joints: | I | I | I | I | I |
| 4 | Coolant level: | I | I | I | I | I |
| 5 | Cabin HEPA air conditioning filter: | R | R | R | R | R |
| 6 | Brake pads and brake discs (4pieces): | I | I | I | I | I |
| 7 | Brake lines and brake hoses: | I | I | I | I | I |
| 8 | Brake fluid level (top-up if needed): | I | I | I | I | I |
| 9 | Brake fluid: | R | R | R | R | R |
| 10 | Steering system ball joints: | I | I | I | I | I |
| 11 | Suspension system: | I | I | I | I | I |
| 12 | Tyres (wear and pressure checks): | I | I | I | I | I |
| 13 | High Voltage Battery: | I | I | I | I | I |
| 14 | Drive train spare parts (High voltage wiring harness and High voltage electrical parts): | I | I | I | I | I |

*In order for the even wear and tear and prolonging the life of the car tyres we recommend that all tyres should be rotated and the cars alignment is checked every 10000km approximately.

** Vehicle maintenance is carried out according to the instrument clusters indication (total mileage) or time frame, whichever comes first.

For a detailed summary of the maintenance schedule, please refer to the cars owner's manual for the respective model

Applicable for models :

| ATTO 3 | Dolphin | SEAL RWD | SEAL AWD | SEAL U EV | SEALION | ATTO 2 |
|--------|---------|----------|----------|-----------|---------|--------|
| | | | | | | |